

SEALS.
SYSTEMS.
SOLUTIONS.
AT YOUR SPEED.™

POWERGLAND - INSTALLATION INSTRUCTIONS

- After packing is installed, split the POWERGLAND in two pieces, and place the POWERGLAND over the shaft.
- Assemble the POWERGLAND by evenly tightening the SHOULDER BOLTS to unitize it around the shaft.
- Install SPRINGS over the studs, push them into POWERGLAND counterbores, and place WASHERS over SPRINGS.
- Tighten GLAND NUTS until the POWERGLAND has penetrated the stuffing box, then loosen POWERGLAND completely.
- Retighten GLAND NUTS evenly until the SPRINGS are hidden and the WASHERS are touching the POWERGLAND.
- The equipment is ready for startup. If flushed, always begin flush prior to equipment startup.
- Check for leak rate, and adjust sparingly and evenly: typically 1-2 flats per adjustment.
 - Wait several minutes between subsequent adjustments.

PowerGland

- 1. POWERGLAND
- 2. SPRING
- 3. SHOULDER BOLT
- 4.STUD
- **5. GLAND NUT**
- 6. WASHER



